



The front panel

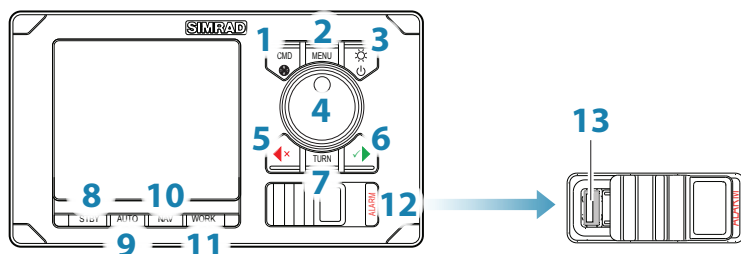

No.	Description
1	CMD/Thruster Press once to take/request command. Press and hold (3 seconds) to activate/deactivate available thrusters
2	MENU Press once to display the active steering mode's quick menu. Press twice to display the Settings menu
3	Power/Light Press to display the Light dialog. Press and hold (3 seconds) to turn the unit ON/OFF
4	Rotary knob (Course wheel). In menus; turn to select menu item and adjust value, press to confirm. In FU mode; turn to set rudder angle. In STBY and NFU mode; press to go to FU mode. In AUTO and NoDrift mode; turn to change set heading/set course, press to capture present heading. In NAV/TRACK mode, turn to set track offset
5	PORT In menus; press to return to previous menu level. In STBY and FU modes; press to go to NFU mode. In AUTO and NoDrift modes; press to change set heading/set course to port
6	STBD In menus; press to confirm menu selection/enter next menu level. In STBY and FU modes; press to go to NFU steering. In AUTO and NoDrift modes; press to change set heading/set course to starboard
7	TURN Press to display the Turn dialog
8	STBY Press to switch the autopilot to Standby mode
9	AUTO Press to activate Auto or NoDrift mode
10	NAV/TRACK Press to activate NAV (AP70) or TRACK (AP80) steering mode
11	WORK Press to display the Work profile dialog
12	ALARM Press to display the Alert dialog (AP80 only)
13	USB connector (AP80 only)

The screen

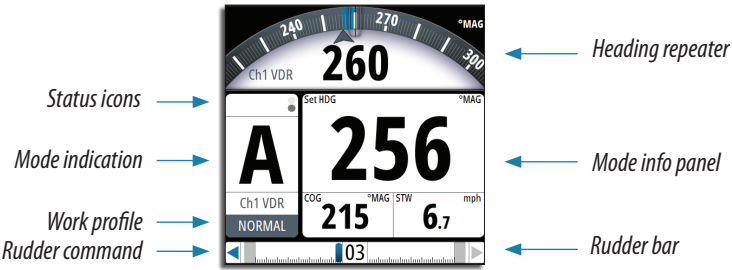

Icon	Description
	Black icon if one or more thrusters are installed and in use. Shaded if the thrusters are unavailable for steering
	Active alerts. Red icon for alarms, yellow for warnings
	Control unit locked
	Screen alive indication - white and black "balls" fade/swap color


The power key

	• Press and hold:	Turn unit on/off	
	• Single press:	Display light dialog	
	• Repeated presses:	Toggle preset brightness levels	


➔ **Note:** If you hold down the power key after the display is turned off, a Power failure alarm will be activated. Press any other key on the unit to silence the alarm.

Command transfer and unit lock


Take command

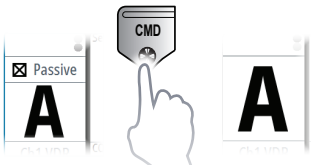

Lock other units

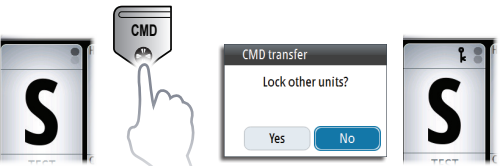


Thrusters on/off

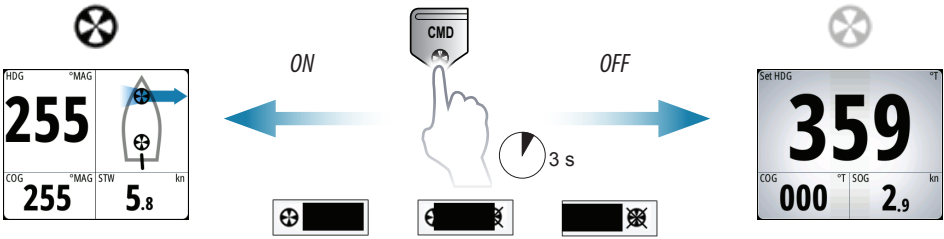


Work profiles

Show Work profile options

Select profile




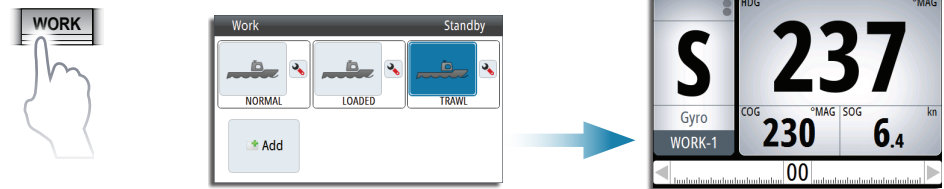


Create new profile

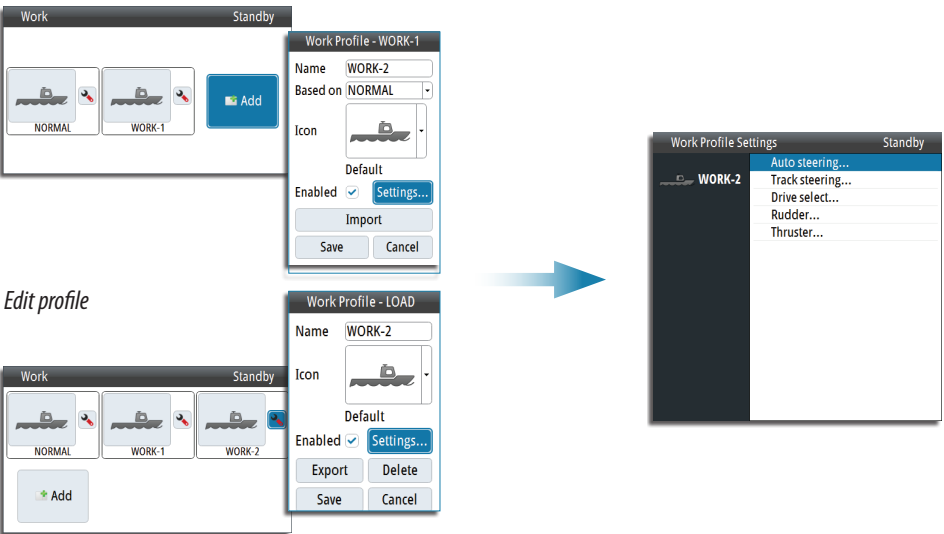

Edit profile

  
Autopilot modes

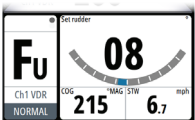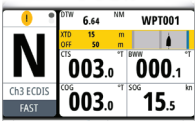Mode	Activate	Mode display	Rotary knob		PORT/ STBD keys
			Turn	Press	
STBY			No action	Switch to FU mode	Switch to NFU mode
NFU	Press PORT/STBD keys in STBY or FU mode		No action	Switch to FU mode	Give rudder command
FU	Press rotary knob  2 s in STBY or NFU mode		Set rudder angle	No action	Switch to NFU mode
AUTO	 		Change set heading	Capture present heading	Change set heading
NoDrift	 		Change set course	Capture present course	Change set course
NAV/ TRACK	 		Set track offset	No action	No action

Menus


1* Show Quick menu
2* Show Settings menu



Return to prev. level,
Remove menu

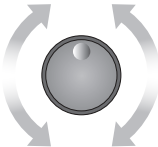
Select menu item,
Adjust value


or


Confirm selection

Quick menu, manual modes

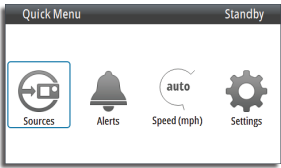


	Automatic and manual selection
	List of active alerts
	Manual setting (Speed)
	See Settings menu

Quick menu, automatic and navigation modes

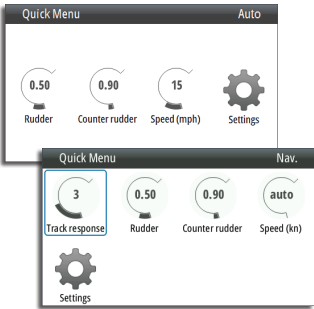


	Manual setting (Rudder, Counter Rudder, Speed and Track response*) * NAV/TRACK mode only
	See Settings menu

Settings menus

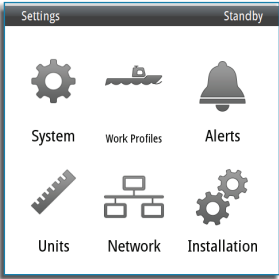

	System settings Standby System Language Light and sound... Time... Advanced... About												
	Work Profiles Standby <table><tr><th>Name</th><th>Enabled</th><th>Active</th></tr><tr><td> NORMAL</td><td>☒</td><td>☒</td></tr><tr><td> LOAD</td><td>☒</td><td></td></tr><tr><td>New...</td><td></td><td></td></tr></table>	Name	Enabled	Active	 NORMAL	☒	☒	 LOAD	☒		New...		
Name	Enabled	Active											
 NORMAL	☒	☒											
 LOAD	☒												
New...													
	Alerts settings Standby Alerts Active... History... Settings...												
	Units settings Standby Units Distance Distance small Speed Wind speed Depth Heading												
	Network settings Standby Network Sources... Device list Diagnostics SimNet groups... Damping...												
	Installation settings Standby Installation Dockside drives... Dockside boat... Compass calibration... Seatrial drives... Seatrial boat...												

Alerts

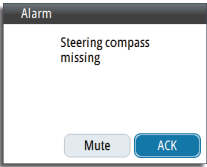

Option	Result
ACK	Stops the siren and removes the alert dialog. The alert icon will remain active, and the alert will be included in the alert listing
Mute	Mutes the siren locally (for 30 seconds) for all units in the same SimNet display group. The alert dialog remains on the display