


► Accessing function displays

Legends indicate active function:

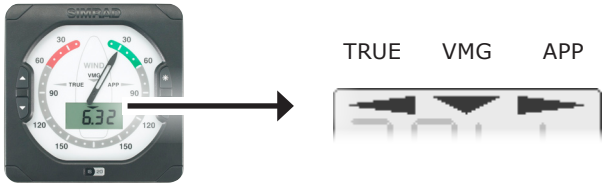


KEY	LCD		Analog Pointer
	Legend	Function	
 		Apparent wind speed	Apparent wind angle
		True wind speed	True wind angle
		VMG to wind	Apparent wind angle
		VMG to wind	True wind angle
		Wind direction:	
	either		True wind angle
	or		

► Menu navigation


	Access menu Confirm a selection/parameter setting
 	Go to previous/next menu item Increase/decrease parameter value

► Display adjustments


Backlight

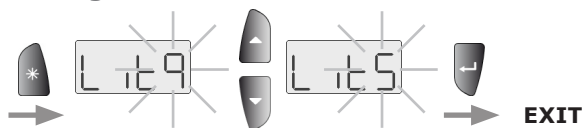

Display profile

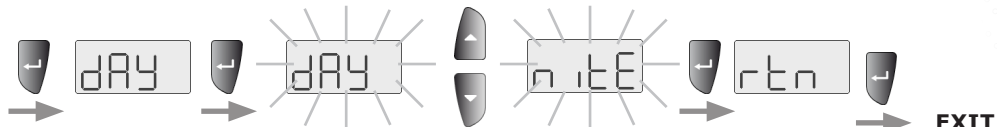


Display color

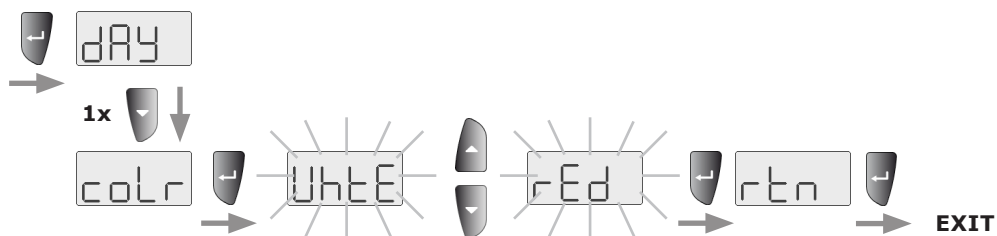

► Wind sensor calibration

Bring the boat up to cruising speed, and head directly into the wind before starting the automatic calibration as below.

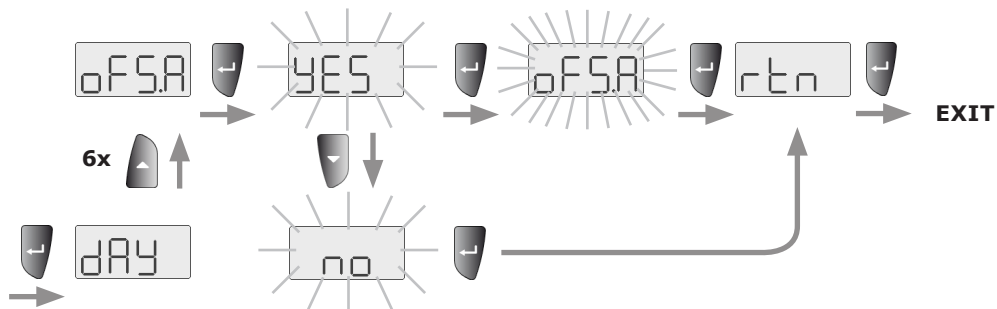

User manual available on:

 simrad-yachting.com