

FU80, NF80, QS80




Mounting template

Gabarit de montage



! Do not resize this mounting template if printing.

- DE** Ändern Sie beim Ausdrucken nicht die Größe dieser Montagevorlage.
ES No cambie el tamaño de esta plantilla de montaje si va a imprimirla.
FI Älä muuta kiinnitysmallin kokoa tulostettaessa.
FR Ne redimensionnez pas ce gabarit en cas d'impression.
IT Non cambiare le dimensioni della dima di montaggio nel caso si decida di stamparla.
NL Pas het formaat van deze montagesjabloon niet aan als u hem afdrukt.
NO Ikke endre størrelsen på denne monteringsmalen hvis den skrives ut.
PT Se imprimir este modelo de montagem, não o redimensione.
SV Ändra inte storlek på monteringsmallen vid utskrift.
ZH 如果打印, 请勿调整此安装模板的大小。

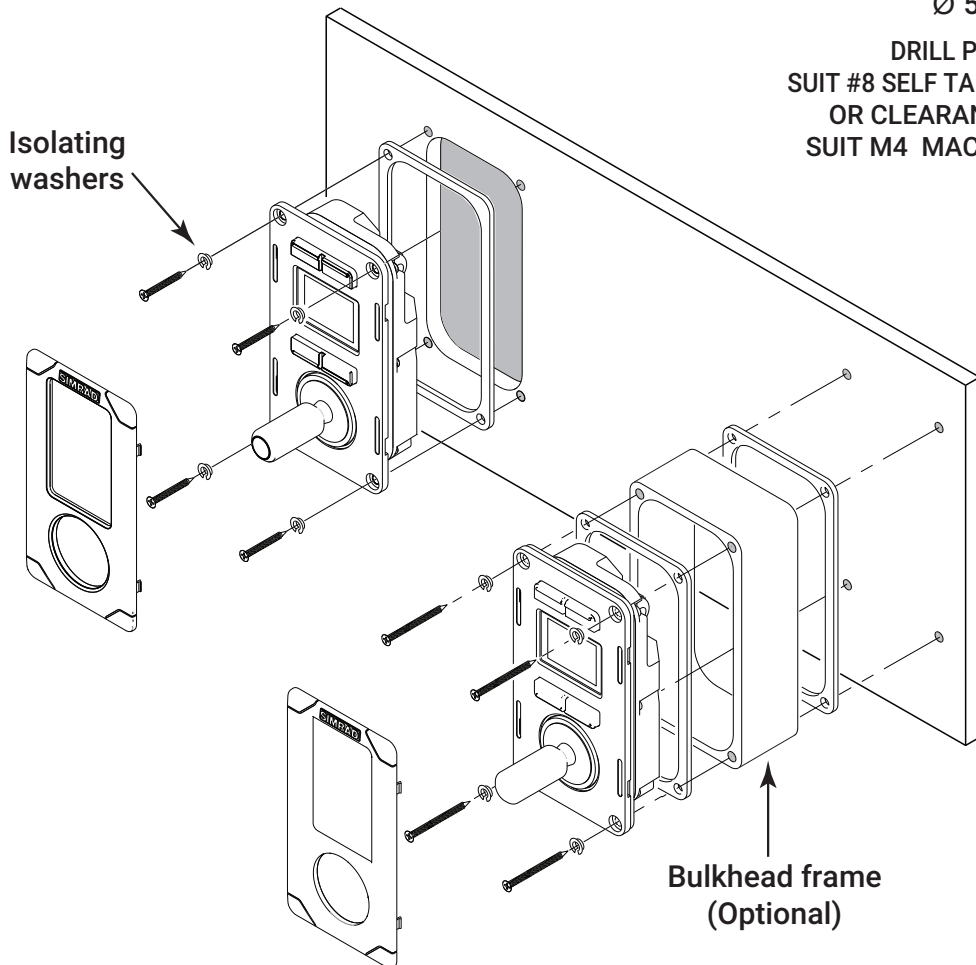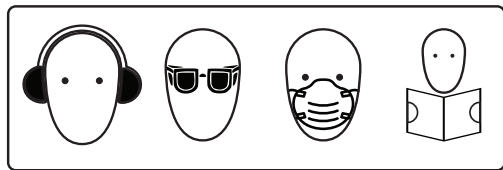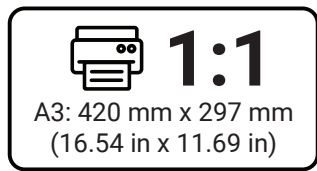

Ø 5 mm (0.20")
 DRILL PILOT HOLE TO
 SUIT #8 SELF TAPPING SCREW
 OR CLEARANCE HOLE TO
 SUIT M4 MACHINE SCREW

